



Dairy Spares Limited
 Unit 1, Civic Industrial Park
 Waymills, Whitchurch
 Shropshire SY13 1TT


Telephone: 01948 667676
 Facsimile: 01948 666505
 email: sales@dairysparses.co.uk

Milk Bar Mobile 50 (MB31) 50 Teat - 500 litre

There has never been a Mobile Calf Feeder so easy to use, or so easy to clean after use!

The 'pull through' Milk Bar Teats do not need to be removed for cleaning, so there is no time consuming re-assembly before feeding, and there are no threads to harbour bacteria. There are no hard to clean pipes or tubes, the only plumbing is the taps. The manifold is open for easy cleaning, and easy teat installation.

User tips. Mix the milk in the 500 litre tank to save double handling. Drive the Milk Bar Mobile to the first group of calves. Park where the ground is level across the width of the feeder, and let the required volume into the manifold. While the milk is flowing, use the manual leveler to level the feeder. It is not necessary to watch the calves as they can only drink the milk that is in the manifolds. We recommend keeping about 10% of the teats free so the last calf to arrive at the feeder can easily find a teat. The Milk Bar Mobile 50 is designed for up to 45 calves of up to 90kg.

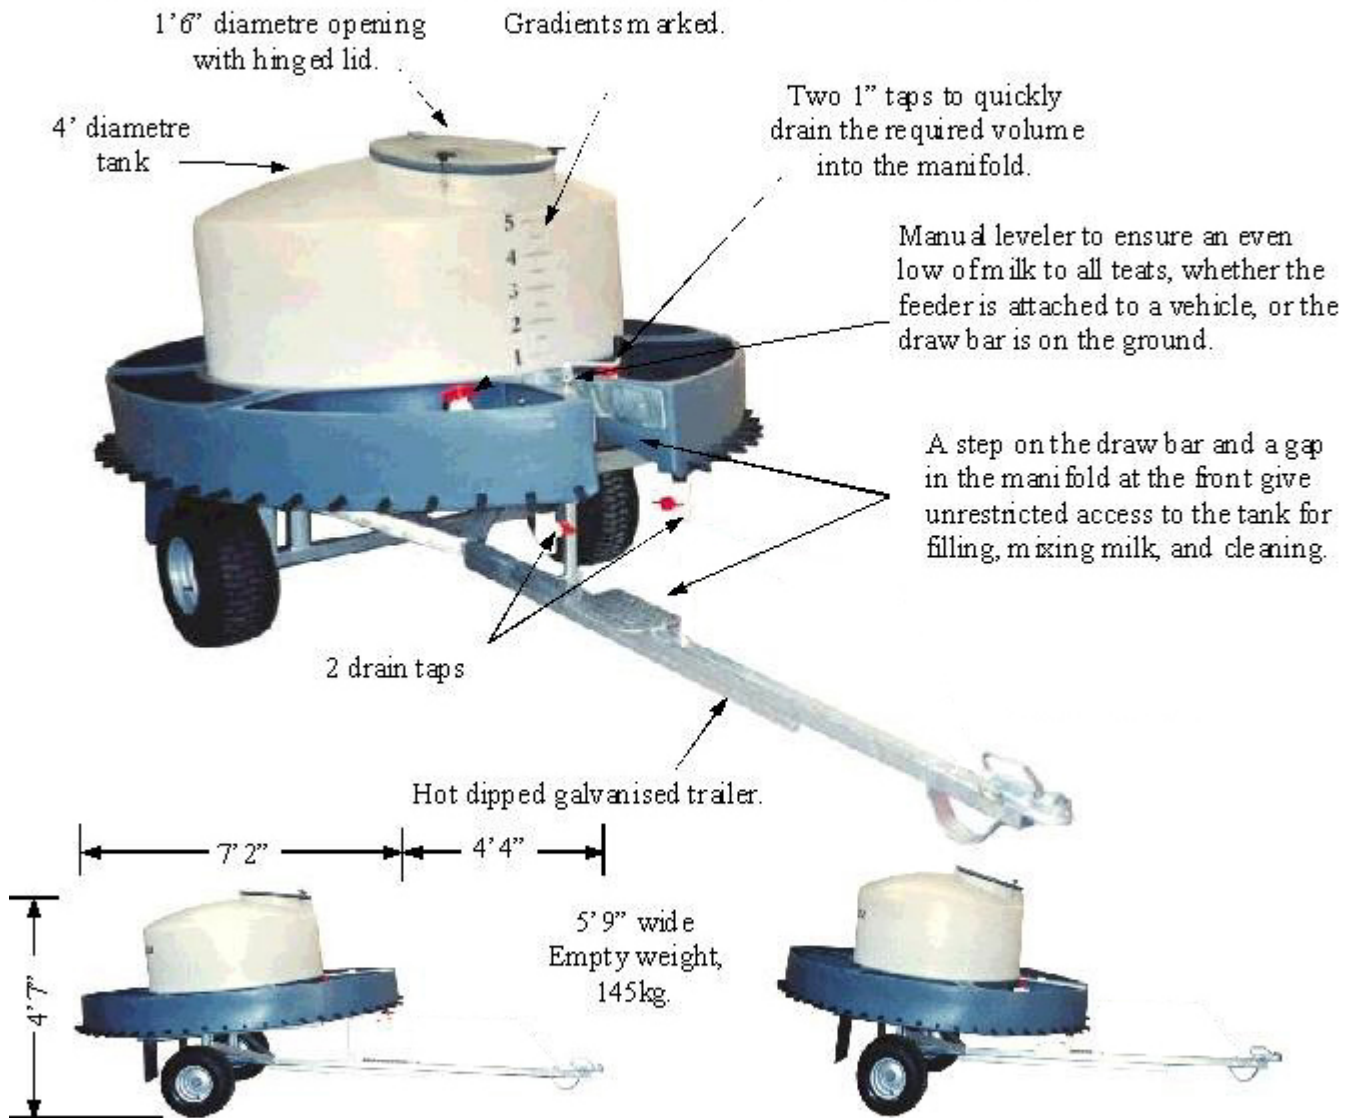

There is enough adjustment in the manual leveler to have the draw bar in the ground, even on sloping

and to use the Milk Bar Mobile on a vehicle with a high tow bar.

CLEANING. Set the leveler in the lowest position so the tank and manifolds will drain, and flush with cold water. Set the leveler back to the level position and put some hot water with alkali detergent added into the tank, give the tank a light scrub. Drain the water into the manifold and give the manifold a light scrub. While the hot water is in the manifold, clean the teats with a horizontal scrubbing action. This will bend the teats with each pass, forcing the water back into the manifold, cleaning the inner teat surface.