

# INFLATION GUIDE



**1**

Remove the valve screw plug using a flat head screwdriver.



**2**

Insert the inflator adaptor into the valve housing so it fits snugly.

**3**

Attach your pressurised air supply and inflate the ball to 0.15bar.



**4**

Remove the inflator adaptor and screw the plug back in and gently tighten.