


Milk Bar™ Teat Cap for Retro Fit to Peach Teat Feeders



MBA67P

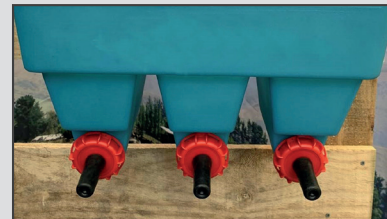

1.

1. Unscrew the existing cap and Peach teat from the feeder.

2. Clean around the feeder thread and orifice.

3. Ensure the washer is fully inserted in the Milk Bar® Cap.

4. Place the Milk Bar™ teat through the cap hole so you can hold it securely while the Milk Bar® Cap is screwed back onto the feeder. *Do not pull the teat fully through the cap at this stage.*



4.

5. Tighten the Milk Bar™ Cap to the feeder so it will not loosen during use.

Milk Bar™ Teat Cap for Retro Fit to Peach Teat Feeders


MBA67P



6.



7.

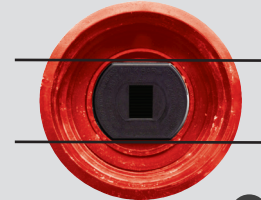

8.

6. Examine the Milk Bar™ Teat end and rotate the teat to ensure the slit is vertical.
7. Pull the Milk Bar™ Teat through the cap until it seats securely into its groove.
8. Check the back of the Milk Bar™ teat to ensure the straight section of the teat is horizontal.
9. It is advisable to periodically check the cap is secure and the teat is correctly positioned.

Important – Cleaning Milk Bar™ Teats



- After each use, rinse with warm water.
- Three times a week, wash with alkali-based detergent in warm water.
- Wash the outside of the teat by using a horizontal scrubbing action with a brush.
- Rinse with fresh water to finish.